


PIN HK1250RD PARTS LIST 2025

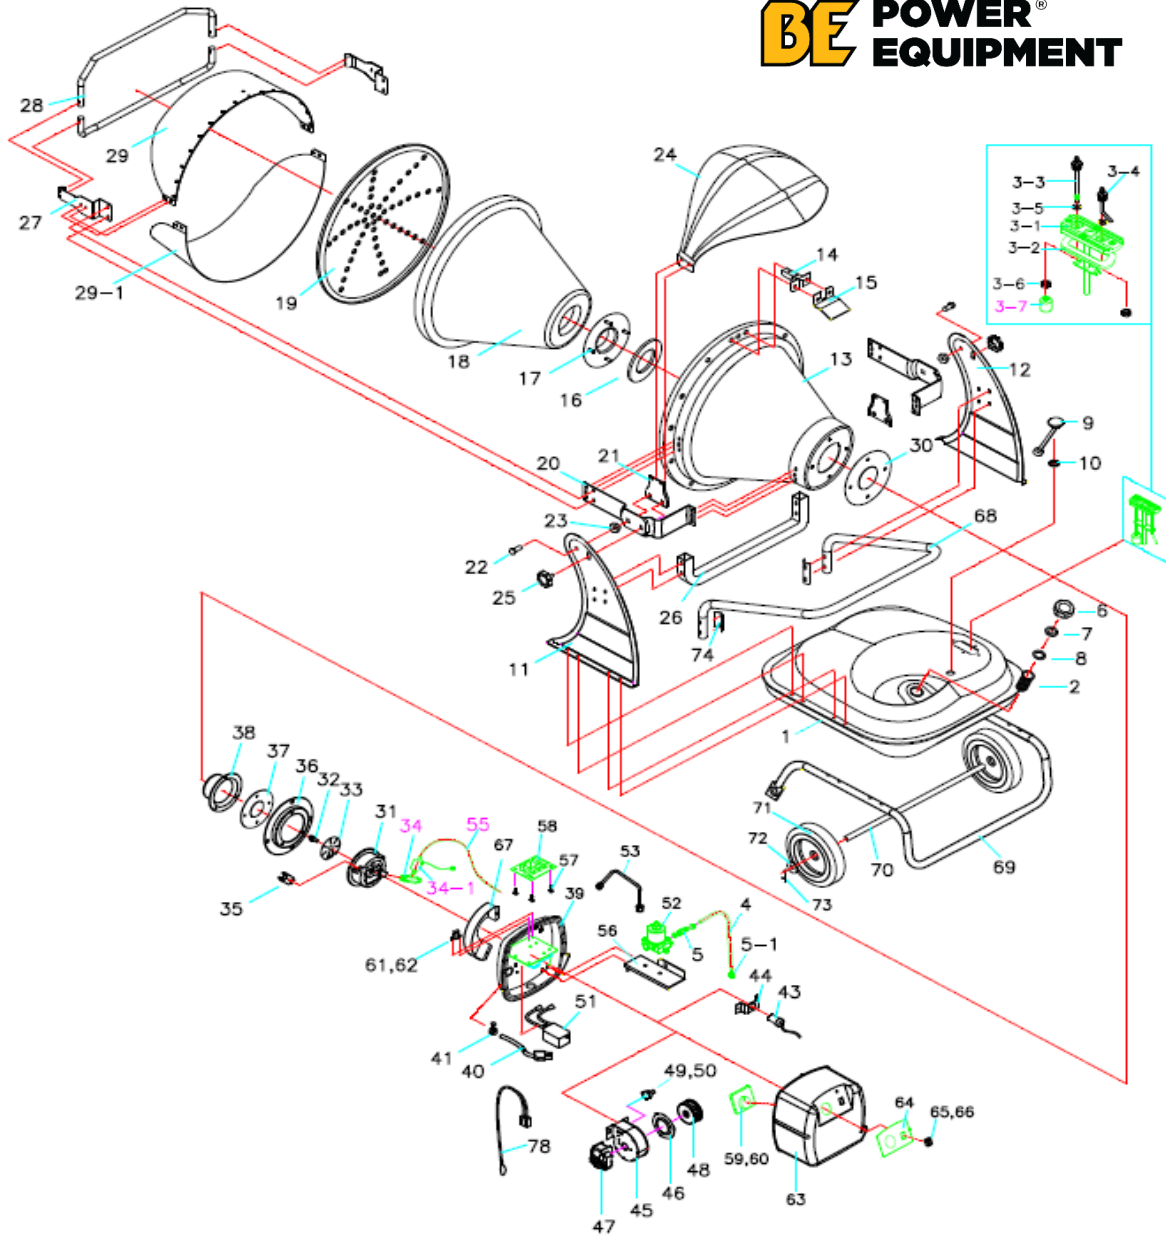

No.	Part No.	Part name	No.	Part No.	Part name
1	PIS SF2-025-001	Fuel Tank	18	PIS SF2-025-018	Insulator Body
2	PIS R20-15019	Fuel filter	19	PIS SF2-025-019	Heat Plate
3-3	PIS SF2-025-003-3	Fuel Pipe	20	PIS SF2-025-020	Cone Body Holder
3-4	PIS SF2-025-003-4	Return Pipe	21	PIS SF2-025-021	Umbrella Bracket
3-5	PIS TK13-008-081	Pipe Packing	22	PIS M12X20	Bolt
3-6	PIS TK13-008-082	Nut	23	PIS M12	Nut
3-7	PIS SF2-220422-01	Inlet Fuel Filter	24	PIS SF2-025-024	Umbrella
4	PIS SF2-220422-10	Flexible Hose	25	PIS SF2-025-025	Rotate Adj. Handle
5	PIS SF2-220422-11	Elbow Flexible Hose	26	PIS SF2-025-026	Support Pipe
5-1	PIS SF2-220429-02	Flexible Hose Clamp	27	PIS SF2-025-027	Guard Bracket
6	PIS TK13-000-005	Fuel Cap	28	PIS SF2-025-028	Guard
9	PIS TK8-003-003	Fuel Guage	29	PIS SF2-025-029	Visor
11	PIS SF2-025-011	Tank Support-L	29-1	PIS SF2-025-029-1	Heater Interception
12	PIS SF2-025-012	Tank Support-R	30	PIS SF2-025-030	Burner Bracket Gasket
13	PIS SF2-025-013	Cone Body	31	PIS SF2-025-031	Burner Head
14	PIS SF2-025-014	Visor Bracket	32	PIS SF2-025-032-0.75	Nozzle
15	PIS SF2-025-015	Sticker Bracket	33	PIS R20-15039-20	Burner Head Blade
16	PIS SF2-025-016	Out Diffusion Gasket	34	PIS SF2-220422-08	Nipple
17	PIS SF2-025-017	Out Diffusion	34-1	PIS SF2-220422-07	Dump Solenoid

PIN HK1250RD PARTS LIST 2025

No.	Part No.	Part name	No.	Part No.	Part name
35	PIS SF2-025-035	Spark Plug	57	PIS SF2-025-057	Spacer Support
36	PIS SF2-025-036	Burner Bracket	58	PIS SF2-220422-03	Main PCB
37	PIS SF2-025-037	Burner Head Gasket	59	PIS SF1-0071-Rv1	sub pcb
38	PIS SF2-025-038	In Diffusion	60	PIS SF2-025-060	PCB Wire
39	PIS SF2-025-039	Control Base	61	PIS R20-15090	Tip Over Switch
40	PIS SF2-025-040	Power Cord	62	PIS R20-15060	Tip Over Switch Wire
41	PIS TK8-002-053	Cord Bush	63	PIS SF2-220422-05	Back Cover
43	PIS R20-15229	Photocell	64	PIS SF70-220422-04	Name Plate
44	PIS R20-15047	Photocell Bracket	65	PIS SF2-025-065	Power Switch
45	PIS SF2-025-045-20	Blower Casing	66	PIS SF2-025-066	Power Switch Wire
46	PIS SF2-025-046	Inlet	67	PIS SF2-025-067	Spark Plug Cover
47	PIS SF2-025-047(1)	Blower Motor	68	PIS SF2-025-068	Handle
48	PIS SF2-025-048	Blower Fan	69	PIS SF2-025-069	Wheel Support Frame
49	PIS R20-15027	Thermostat	70	PIS SF2-025-070	Wheel Axle
50	PIS SF2-025-050	Thermostat Wire	71	PIS SF2-025-071	Wheel
51	PIS SF2-025-051	Ignitor	72	PIS SF2-025-072	Washer
52	PIS SF2-220422-06	Electronic Pump	73	PIS SF2-025-073	Pin
53	PIS SF2-025-053	Electronic Pump Pipe	74	PIS SF2-025-074	Pipe Washer
55	PIS SF2-220422-12	Return Hose	78	PIS SF2-025-078-20	Thermistor
56	PIS SF2-220422-13	Electronic Pump Base			