



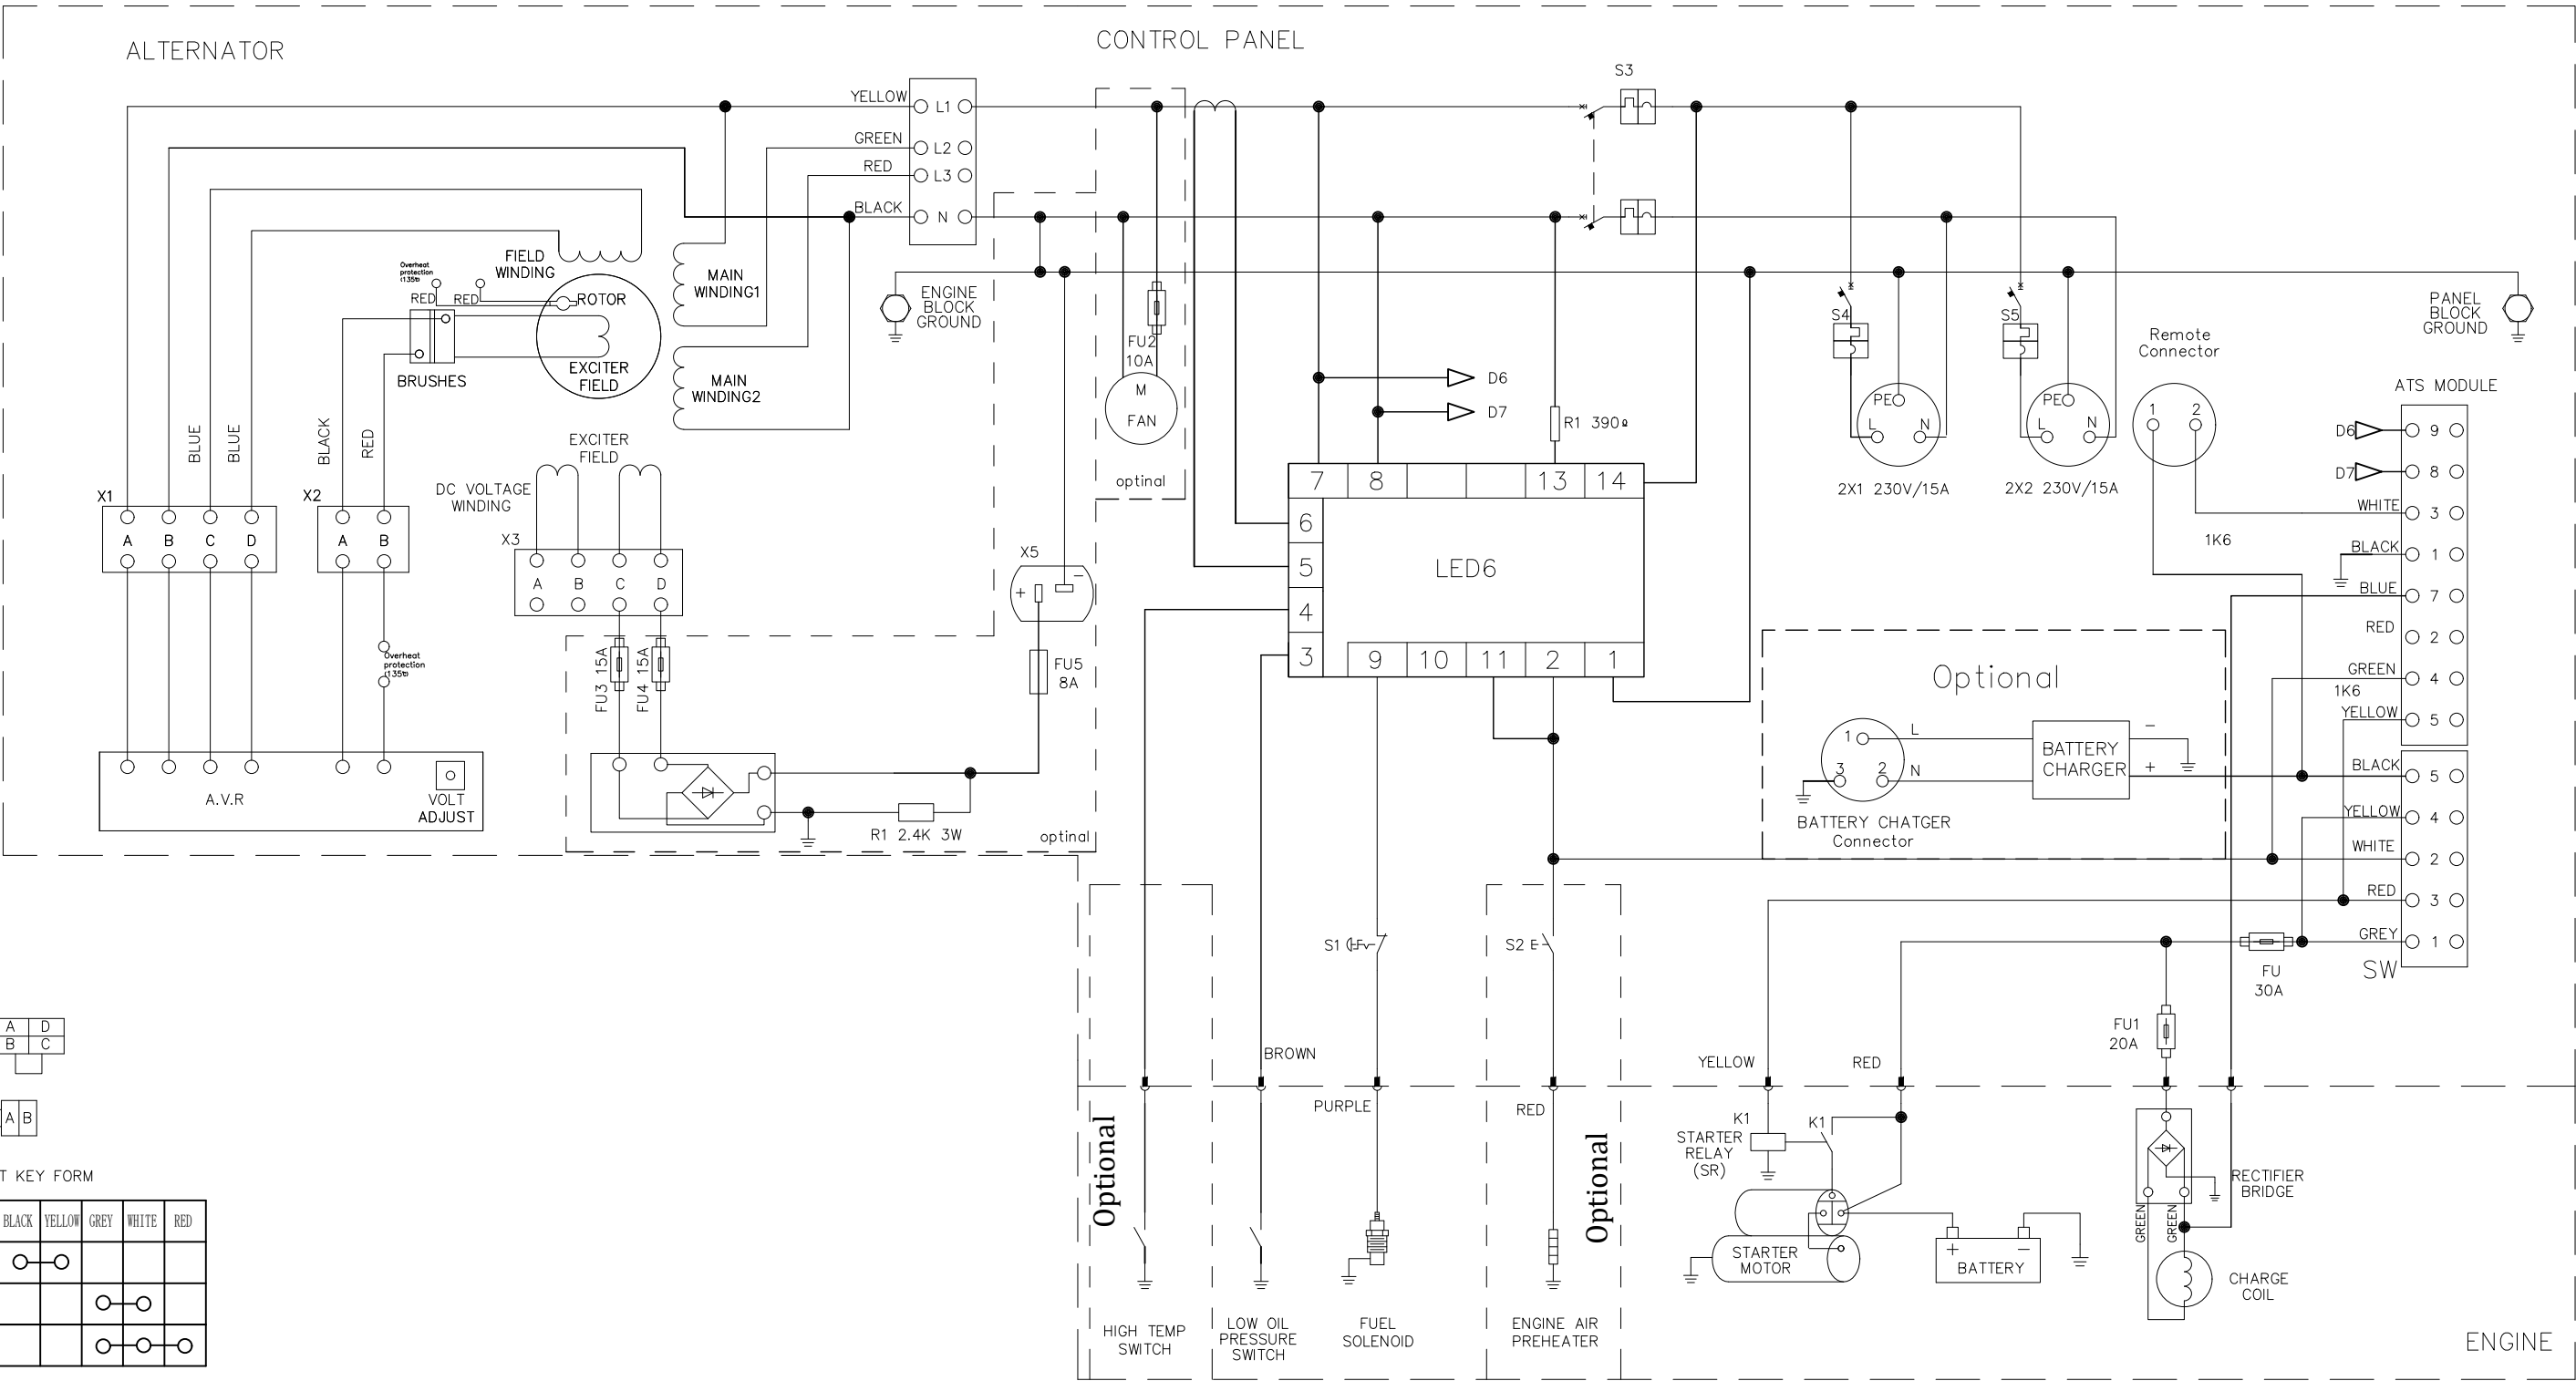

NOTE:

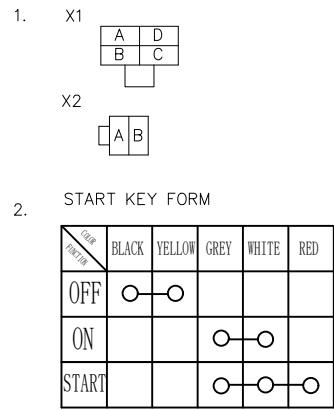

3. ATS MODULE	
No.	FUNCTION
1	BATTERY -
2	BATTERY +
3	ATS SIGNAL +
4	FUEL SOLENOID
5	ENGINE START
6	ATS SIGNAL -
7	GENERATOR RUN SIGNAL-CHARGING COIL
8	GENERATOR RUN SIGNAL-AC220
9	GENERATOR RUN SIGNAL-AC220

4. ATS CONNECTOR	
No.	FUNCTION
1	PE
2	ATS SIGNAL
3	POWER

5. FUSE FUNCTION	
FU	DC POWER FUSE
FU1	REGULATOR FUSE
FU2	FAN PROCTION FUSE
FU3	PRESSURIZER CHARGING FUSE
FU4	PRESSURIZER CHARGING FUSE
FU5	T-SHAPED FUSE

S1	EMERGENCY STOP BUTTON
S2	ENGINE PREHEAT BUTTON
S3	LEAKAGE CIRCUIT BREAKER
S4	LEAKAGE CIRCUIT BREAKER
S5	LEAKAGE CIRCUIT BREAKER



				SCALE:		MATERIAL:	QUANTITY:	WEIGHT:
				1:1				
				DATE	NAME	TITLE:		
				DRAWN		ELECTRICAL DIAGRAM with LED6		
				CHECKED		USED ON:		
				APPROVED		Diesel, Signle phase		
						PART NO.: 123 G7900D-ILET	FIRST ANGLE PROJECTION	SIZE:
						DWG NO.: XXXXXXXX		A3
						REV NO.: 0	SHEET:	
SIGN	VARIATION	NAME	DATE					