

BE POWER[®] **EQUIPMENT**



123 Gi130E

OPERATORS MANUAL



TABLE OF CONTENTS

INTRODUCTION

Introduction & Identification Numbers	3
---	---

IMPORTANT SAFETY WARNINGS

Safety Warnings.....	4
----------------------	---

SET-UP

Component List.....	8
Control Panel.....	9

OPERATION

Pre-Operation Safety & Inspection Procedures	10
Start-Up Procedure	12
Shutdown Procedure	12
Bluetooth Function.....	13
General Operation.....	14

MAINTENANCE

Battery Charging.....	16
Maintenance Schedule.....	17
Spark Plug Replacement.....	18
Oil Service.....	19
Oil Filter Service	20
Air Filter	21
Storage	22

TROUBLESHOOTING

Troubleshooting Table	23
Circuit Diagram.....	26

WARRANTY

Warranty Statement	27
--------------------------	----



INTRODUCTION & PRODUCT INFO

Congratulations on your purchase of a BE Power Equipment generator. You can be confident that this generator is constructed and tested with optimum performance and quality in mind.

Reading this manual will help get you the best results for set-up, operation, maintenance and avoid personal injury or damage to your machine. By knowing how best to operate this machine, you will be better positioned to show others who may also operate the unit.

All the information in this manual is based on the latest product information available at the time of printing. BAR Group Pty Ltd reserves the right to make changes at any time without notice or incurring any obligation.

All BE Power Equipment Portable Generators are tested in our factory and may contain residual oil and/or fuel odor; EPA and CARB Compliant.

Owner/Operator Responsibility

The owner/operator must have a thorough understanding of the operation, maintenance and dangers associated with using this machine. It must be understood that it is ultimately up to the owner/operator to safely use this machine as outlined in this manual.

This manual is considered a part of the machine and needs to be kept in a safe location. If the machine is resold or given to someone else, this manual needs to be included.

PRODUCT IDENTIFICATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____

Dealer Name: _____

*** THE ACTUAL PRODUCT MAY VARY FROM THE IMAGES SHOWN IN THE MANUAL.**

SAVE THESE INSTRUCTIONS - SAFETY RULES

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

The safety alert symbol (▲) is used with a signal word (**DANGER**, **CAUTION**, **WARNING**), a pictorial and a safety message to alert you to hazards.

DANGER indicates a hazard that, if not avoided, will result in death or serious injury.

WARNING indicates a hazard that, if not avoided, could result in death or serious injury.

CAUTION indicates a hazard that, if not avoided, might result in minor or moderate injury.

NOTICE indicates a situation that could result in equipment or property damage.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

WARNING – When using this product, the following precautions should always be observed and adhered to.

1. Read all instructions before using the product.
2. To reduce the risk of injury, close supervision is necessary when a product is used near children.
3. Know how to shut the product off. Be thoroughly familiar with the controls.
4. Stay alert. Watch what you are doing.
5. Do not operate the product when fatigued or under the influence of alcohol or drugs.
6. Do not overreach or stand on unstable support. Instead, keep solid footing and balance at all times.
7. Follow the maintenance instructions specified in the manual.

▲ WARNING - Generator exhaust contains carbon monoxide, a poisonous gas that can kill you.

- Use the generator outdoors, away from open windows, vents, or doors that could allow the carbon monoxide gas to come indoors. Keep the generator at least 1 meter (3 feet) away from any structure or building during use.
- NEVER use a generator indoors, including in homes, garages, basements, crawl spaces, and other enclosed or partially-enclosed areas, even with ventilation. Opening doors and windows or using fans will not prevent carbon monoxide build-up in the home.
- Never use a generator in enclosed or partially-enclosed spaces.

Generators can produce high levels of carbon monoxide very quickly. When you use a portable generator, remember that you cannot smell or see carbon monoxide. Even if you can't smell exhaust fumes, you may still be exposed to carbon monoxide.

SAFETY OVERVIEW

- NEVER operate the generator in an explosive atmosphere, near combustible materials or where ventilation is not sufficient to carry away exhaust fumes. Exhaust fumes can cause serious injury or death.
- If you start to feel sick, dizzy, or weak while using a generator, get to fresh air RIGHT AWAY. DO NOT DELAY. The carbon monoxide from generators can rapidly lead to full incapacitation and death.
- If you experience serious symptoms, get medical attention immediately. Inform medical staff that carbon monoxide poisoning is suspected. If you experienced symptoms while indoors, have someone call the fire department to determine when it is safe to re-enter the building.

⚠ WARNING - Starter cord kickback (rapid retraction) will pull hand and arm toward engine faster than you can let go which could cause broken bones, fractures, bruises, or sprains resulting in serious injury.

- When starting the engine, pull cord slowly until resistance is felt and then pull rapidly to avoid kickback.
- NEVER start or stop engine with electrical devices plugged in and turned on.

⚠ WARNING - Fuel and its vapors are extremely flammable and explosive. Fire or explosion can cause severe burns or death.

- Observe all safety regulations for the safe handling of fuel. Handle fuel in safety containers. If the container does not have a spout, use a funnel.
- Do not overfill the fuel tank, leave room for the fuel to expand.
- Do not refill fuel tank while the engine is running. Before refueling the generator, turn it off and let it cool down. Gasoline spilled on hot engine parts could ignite.
- Fill the tank only on an area of bare ground. While fueling the tank, keep heat, sparks and open flame away. Carefully clean up any spilled fuel before starting engine.
- Always fill fuel tank in an area with plenty of ventilation to avoid inhaling dangerous fumes.
- NEVER store fuel for your generator in the home. Gasoline, propane, kerosene, and other flammable liquids should be stored outside of living areas in properly-labeled, non-glass safety containers. Do not store them near a fuel-burning appliance, such as a natural gas water heater in a garage. If the fuel is spilled or the container is not sealed properly, invisible vapors from the fuel can travel along the ground and can be ignited by the appliance's pilot light or by arcing from electric switches in the appliance.

This product has been designed with internal grounding or floating bonded neutral. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.

⚠ DANGER - Improper grounding can result in a risk of electrocution. Check with a qualified electrician for your local requirements if you are in doubt as to whether the unit is properly grounded.

- This generator is equipped with a grounding terminal for added protection. Using the ground path from the generator to an external ground source as instructed in the section labeled "Grounding Instructions" in the Preparation section of this manual can be necessary. Please consult a qualified electrician for local regulations.
- The generator is a potential source of electrical shock if not kept dry.
- Keep the generator dry and do not use in rain or wet conditions. To protect from moisture, operate it on a dry surface under an open, canopy-like structure. Dry your hands if wet before touching the generator.
- Plug appliances directly into the generator. Or, use a heavy duty, outdoor-rated extension cord that is rated (in watts or amps) at least equal to the sum of the connected appliance loads. Check that the entire cord is free of cuts or tears and that the plug has all three prongs, especially a grounding pin.
- NEVER try to power the house wiring by plugging the generator into a wall outlet, a practice known as "back feeding". This is an extremely dangerous practice that presents an electrocution risk to utility workers and neighbors served by the same utility transformer. It also bypasses some of the built-in household circuit protection devices. If you must connect the generator to the house wiring to power appliances, have a qualified electrician install the appropriate equipment in accordance with local electrical codes.

⚠ WARNING - To reduce the risk of injury, read this operator's manual completely before using. When using this product, the following basic precautions should always be followed.

- Do not enclose the generator or cover it. The generator may become overheated if it is enclosed. If generator has been covered to protect it from the weather during non use, be sure to remove it and keep it well away from the area during generator use.
- Operate the generator on a level surface. It is not necessary to prepare a special foundation for the generator. However, the generator will vibrate on an irregular surface, so choose a level place. If the generator is tilted or moved during operation, fuel may spill and/or the generator may tip over, causing a hazardous situation. Proper lubrication cannot be expected if the generator is operated on a steep incline or slope. In such a case, piston seizure may occur even if the oil is above the upper level.
- Pay attention to the wiring or extension cords from the generator to the connected device. If the wire is under the generator or in contact with vibrating part, it may break and possibly cause a fire, generator burnout, or electric shock hazard. Replace damaged or worn cords immediately.

SAFETY OVERVIEW

- Do not operate in rain, in wet or damp conditions, or with wet hands. The operator may suffer severe electric shock if the generator is wet due to rain or snow. If wet, wipe and dry it well before starting. Do not pour water directly over the generator, nor wash it with water.
- Be extremely careful that all necessary electrical grounding procedures are followed during each and every use. Failure to do so can be fatal.
- DO NOT smoke while charging a battery. The battery emits flammable hydrogen gas, which can explode if exposed to electric arcing or open flame. Keep the area well ventilated and keep open flames / sparks away when charging a battery.
- The engine becomes extremely hot during and for some time after operation. Keep combustible materials well away from generator area. Be very careful not to touch any parts of the hot engine especially the muffler area or serious burns may result
- Keep children and all bystanders at a safe distance from work area.
- It is absolutely essential that you know the safe and proper use of the power tool or appliance that you intend to use. All operators must read, understand and follow the tool / appliance owners manual. Tool and appliance applications and limitations must be understood. Follow all directions given on labels and warnings. Keep all instruction manuals and literature in a safe place for future reference.
- Use only "LISTED" extension cords. When a tool or appliance is used outdoors, use only extension cords marked "For Outdoor Use". Extension cords, when not in use should be stored in a dry and well ventilated area.
- Always switch off generator's AC circuit breaker and disconnect tools or appliances when not in use, before servicing, adjusting, or installing accessories and attachments.
- Make sure the engine is stopped before starting any maintenance, servicing or repair.

NOTE:

Ensure maintenance and repair of the generator are performed by properly trained personnel only.

SAVE THESE INSTRUCTIONS




COMPONENT LIST



- 1: Fuel Tank Cap** - Provides access to the fuel tank for refueling purposes.
- 2: Foldable Handle** - Allows the user to easily transport the unit.
- 3: Fuel Tank** - Stores gasoline.
- 4: Right Side Outer Cover**
- 5: Control Panel** - Allows the user to access the controls for the unit.
- 6: Engine Vents** - Helps move airflow into the unit and regulate engine temperatures.
- 7: Wheels**

CONTROL PANEL - Gi130E

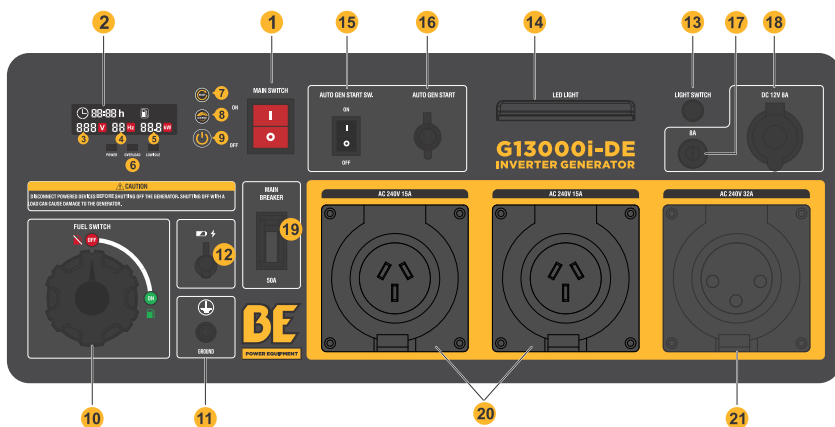

- 1: **Main Switch** - Manage battery power and shutdown. *Tip: If you do not use the generator for more than 7 days (168 hours), please press the main switch to the "OFF" position, which can prevent the battery from running out.*
- 2: **Hours** - Represents the total time the generator has been operational.
- 3: **VOLTS** - Voltage display.
- 4: **Hz** - Frequency display.
- 5: **POWER** - Actual numerical power display.
- 6: **Indicator Light** - **POWER**: Indicates the inverter is ready to be used. **OVERLOAD**: A red light indicates the machine is overloaded. **LOW OIL**: A red light indicates you do not have enough oil in your machine.
- 7: **Reset Switch** - If the inverter is overloaded, the reset breaker will trip. The engine will continue to run, but there will be no electrical output from the unit. Unplug your devices, and push the breaker to reset it.
- 8: **Eco Mode Switch** - Press the button to turn green and enter low idle mode, where the engine will sense the required load and run at a slower RPM to save fuel.
- 9: **Start/Stop Switch**
- 10: **Fuel Switch** - Switch to ON to turn ON the fuel, switch to OFF to turn OFF the fuel.
- 11: **Ground Terminal** - Allows the user to ground their unit.
- 12: **Battery Charging Port** - Allows the user to charge the unit's battery.
- 13: **Light Switch** - Press once to turn the LED light on. Press again to turn the light off.
- 14: **LED Light**
- 15: **AUTO GEN START SW.** - Connect the automatic start/stop device to the communication interface ② through the automatic start/stop connection line, and press this switch to the ON position. The generator will be controlled by an external device with automatic start/stop function. After this function is enabled, the push start button and remote start start/stop button and remote start are disabled.
- 16: **AUTO GEN START** - The communication interface for automatically starting and stopping the generator. Used to connect equipment with automatic start stop function.
- 17: **DC Protector** - If the generator is overloaded, the DC protector will trip to block current.
- 18: **8A 12V DC Outlet**
- 19: **Main Circuit Breaker** - The main circuit breaker controls total output of all outlets to protect the generator from overload or short circuit.
- 20: **240V AC 15A Outlet** - This outlet can carry up to 15 amps.
- 21: **240V AC 32A Outlet** - This outlet can carry up to 32 amps.



PRE-OPERATION SAFETY & INSPECTION PROCEDURES

REFUELING:

⚠ DANGER - GASOLINE IS HIGHLY FLAMMABLE AND TOXIC. DO NOT OVERFILL THE FUEL TANK. TIGHTEN FUEL CAP ONCE YOU HAVE REFILLED THE MACHINE.


1. Remove the fuel tank cap and add at least 87 octane gasoline.

⚠ ATTENTION - IF YOU SPILL FUEL WHILE REFILLING THE UNIT, BE SURE TO WIPE UP ANY EXCESS FUEL THAT MAY HAVE SPILLED. ONLY USE UNLEADED GASOLINE TO FILL THIS UNIT. USING LEADED GASOLINE WILL SERIOUSLY DAMAGE THE INTERNALS OF THE ENGINE.

OIL:

THIS GENERATOR IS SHIPPED WITHOUT OIL IN THE ENGINE. FILL YOUR UNIT WITH THE PROVIDED OIL PRIOR TO FIRST USE.

1. Place the generator on to a flat surface.

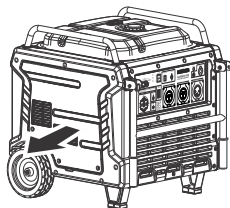

2. Loosen bolts and remove the right side cover.

3. Unscrew the oil fill cap and fill the unit with oil.



4. Reassemble the right cover and tighten the bolts.

5. Check engine oil level daily and add as needed. Pull out the oil dipstick and check the oil level. (The oil dipstick is on the left side of the generator.)

6. Put back the oil dipstick, wipe off the surrounding oil, and reassemble the exterior cover plate.





PRE-OPERATION INSPECTION:

Prior to each use of your unit, ensure you perform these checks to prevent any potential failures.

COMPONENT	CHECK	SOLUTIONS
Fuel	Ensure your unit has fuel in it.	Fill your unit with fuel if necessary.
Oil	Check your oil levels.	Add oil if necessary.
	Check for any oil leaks.	Contact a service center for help.
Abnormal conditions during operation.	Check operating condition of the generator.	Contact a service center for help.
Battery	Check if the battery is charged.	See the “battery charging” page.



START-UP AND SHUTDOWN PROCEDURE

START-UP PROCEDURE




1

FILL THE UNIT WITH 87 OCTANE GASOLINE.




2

FILL UNIT WITH OIL OR CHECK OIL LEVELS AS NEEDED.

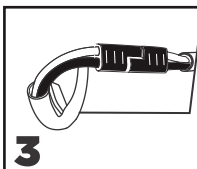

3

CONNECT THE BATTERY BY ATTACHING THE CLIPS.

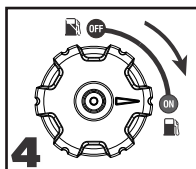


4

FLIP FUEL SWITCH TO THE "ON" POSITION.




5

TURN OFF THE ECO MODE.

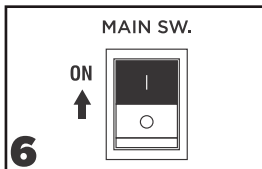


6

TURN MAIN SWITCH TO "OFF" POSITION.

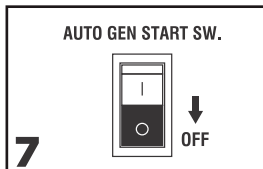


7

CHECK WHETHER THE AUTO GEN START SWITCH IS IN THE "OFF" POSITION.

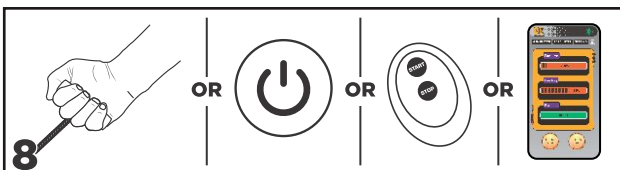

8


PULL THE RECOIL HANDLE OR PRESS THE START BUTTON, OR PRESS THE REMOTE CONTROL START BUTTON, OR APP START.

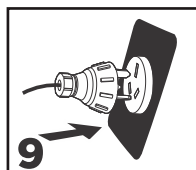

9

PLUG YOUR DESIRED EQUIPMENT INTO THE UNIT.

SHUTDOWN PROCEDURE

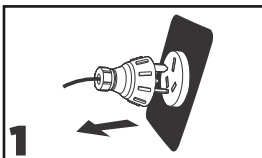


1

UNPLUG ALL POWER CORDS FROM THE UNIT.




2

PRESS THE START/STOP BUTTON, OR PRESS THE REMOTE CONTROL STOP BUTTON, OR APP STOP.

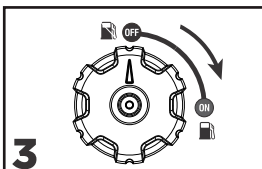

3

FLIP FUEL SWITCH TO THE "OFF" POSITION.

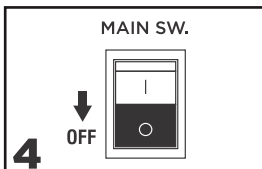

4

BLUETOOTH FUNCTION



The generator is connected to the smartphone via Bluetooth.

Suggestion: In an unobstructed environment, the connection distance between the generator and the smartphone should not exceed 80 feet.


Note: To check the real voltage of the battery, it needs to be checked when the battery is not in the charging state (five minutes after the generator is turned off or five minutes after the external charger is unplugged).

Note: The maximum distance between your smartphone with Bluetooth function enabled and the generator can be achieved when there is a clear, unobstructed, and line - of - sight connection. The connection distance can also be affected by factors such as the type of smartphone used, the surrounding environment, building structure, and electronic interference.


PAIRING APP




SCAN THE QR CODE TO
DOWNLOAD THE APPLICATION.

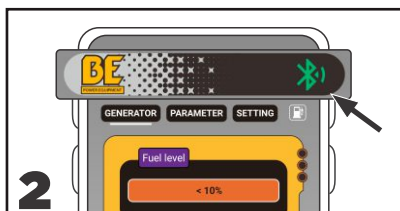

ENABLE BLUETOOTH FUNCTION
ON YOUR SMARTPHONE.

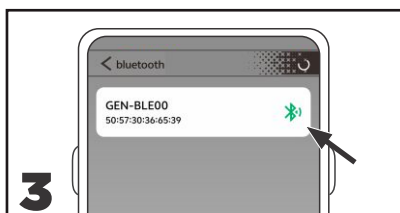

AFTER ENTERING THE INTERFACE,
CLICK ON THE DEVICE TO
CONNECT VIA BLUETOOTH.

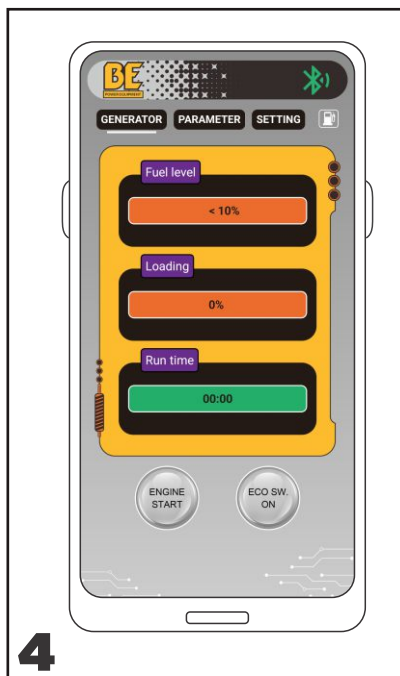

ON THIS PAGE, START/STOP THE
GENERATOR AND TURN ON/OFF
THE ENERGY-SAVING MODE.

OPTIMAL ENVIRONMENT




AMBIENT TEMPERATURE	-20°C to 35°C
OPTIMAL HUMIDITY	Below 95%
OPTIMAL ALTITUDE	Below 1,500m (At regions above 1,000m the unit will generate less power)

In certain environments, total output power can be affected.

- Every 5°C increase in ambient temperature above optimal will reduce your units output by ~2%.
- Every 30% increase in relative humidity will reduce the total output of your generator by ~1.5%

GENERATOR WIRING

- If you decide to connect your generator to your household power as a backup power supply, ensure the task is done by a professional electrician.
- Always check any device, cable or other accessory that you plug into the generator is safe and reliable. A damaged connection may cause damage to the generator and is a potential fire hazard.
- Avoid connecting this generator directly to any commercial power outlet.
- When using extension cables, ensure the cable is suited for the load you will be applying to it. Always make sure your extension cable is not damaged.

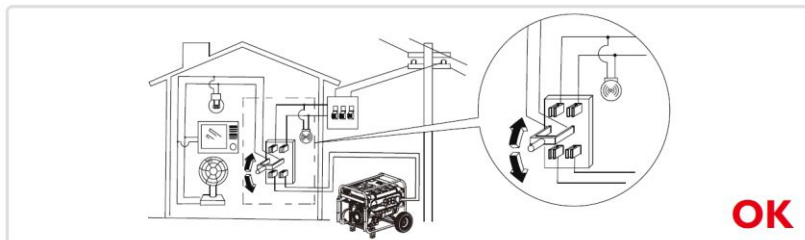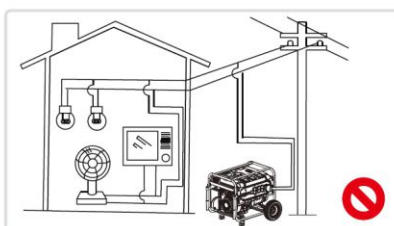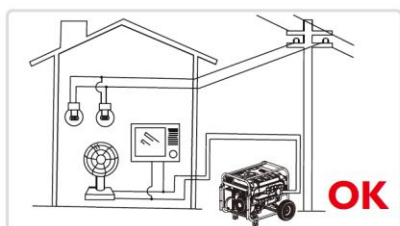

OPERATION

BEFORE CONNECTING POWER

- Make sure all electrical equipment, including wires and plugs, are in good condition before connecting to the generator.
- Make sure all loads driven by the generator are within the rated load range.
- Ensure the connected load is within the rated range for current.

⚠ ATTENTION: IT IS RECOMMENDED TO GROUND YOUR GENERATOR BEFORE EACH USE. IF THE ELECTRICAL EQUIPMENT REQUIRES IT, YOU MUST GROUND YOUR GENERATOR AS IT CAN LEAD TO DAMAGE TO BOTH YOUR UNIT AND YOUR EQUIPMENT.

CONNECTING POWER

1. Start the engine.
2. Turn eco mode switch to the “on” position.
3. Insert plug into desired AC outlet.
4. Ensure AC indicator light is on.
5. Turn your equipment on.

TIP: BEFORE INCREASING ENGINE SPEED, ECO MODE MUST BE OFF. IF YOU ARE CONNECTING MULTIPLE LOADS TO THE GENERATOR, CONNECT THEM FROM LARGEST TO SMALLEST, ACCORDING TO THE ELECTRICAL LOAD.

GENERATOR GROUNDING

In order to prevent any damage to the generator caused by electric shock or improper electric application, it is recommended that the generator is grounded with a good conductor with insulating sheath.

1. Use a grounding wire with sufficient electrical energy capacity.
2. Connect one end of the grounding wire to the grounding bolt on the generators control panel.
3. Insert the grounding body (iron rod with a diameter of 0.5 - 1 cm) at least 20cm into the earth.
4. Connect the other side of the grounding wire to the grounding body.



The lifespan of a battery in storage is about 6 months. If your generator isn't used for a long time, the battery will lose charge. If the battery loses charge, you can attempt to recharge it. If charging the battery does not work, you must replace the battery.

CHARGING METHODS

Starting the Generator: Use the recoil starter to start the generator. This will allow the unit to charge the battery

On-board Battery Trickle Charger: Connect Charge adaptor to an external mains 240V outlet, to constantly keep your battery charged while in standby mode.

⚠ WARNING: DO NOT START THE GENERATOR WHILE CHARGING WITH AN EXTERNAL POWER SUPPLY. KEEP BATTERIES AWAY FROM FIRE SOURCES. KEEP THE BATTERY IN A COOL AND DRY PLACE, AWAY FROM DIRECT SUNLIGHT. KEEP BATTERIES OUT OF REACH OF CHILDREN.

Charge your battery properly:

- Keeping lithium-ion batteries properly charged and discharged can prolong battery life. Maintaining a power level of 10% - 90% in lithium-ion batteries is beneficial for battery protection.

Charge your battery at the right temperature:

- Never charge your battery if the temperature is not within 0°C to 45°C.

Avoid overcharging:

- Overcharging lithium-ion batteries should be avoided at all costs. Overcharging a lithium-ion battery will lead to serious degradation of battery performance, damage to the battery itself, or in some cases can cause an explosion.

MAINTENANCE SCHEDULE

Following the maintenance schedule is the best way to ensure safe, economical, and zero-failure operation. In order to maintain good condition, you must inspect your unit regularly.

MAINTENANCE CYCLE		EACH USE	EACH MONTH OR 20 HOURS	EVERY 3 MONTHS OR 50 HOURS	EACH YEAR OR 100 HOURS
ITEM					
ENGINE OIL	CHECK/FILL	✓			
	REPLACE		✓		
AIR FILTER	INSPECTION	✓			
	CLEAN		✓		
	REPLACE			✓	
SPARK PLUG	CLEAN/ADJUST				✓*
SPARK ARRESTOR	CLEAN			✓	
IDLE SPEED	CHECK/ADJUST				✓
VALVE CLEARANCE	CHECK/ADJUST				✓
FUEL TANK AND FUEL FILTER	CLEAN				✓
FUEL LINE	INSPECTION	EVERY 2 YEARS (REPLACE IF NECESSARY)			
CYLINDER HEAD, PISTON	REMOVE CARBON DEPOSIT**	IF THE ENGINE IS LESS THAN 225CC, EVERY 125 HOURS. IF THE ENGINE IS MORE THAN 225CC, EVERY 250 HOURS.			
* REPLACE IF NECESSARY					
** MUST BE SERVICED BY AN AUTHORIZED SERVICE CENTER					

ATTENTION:

- If your unit is often used in environments with high temperatures or is consistently at a high load, change the oil every 25 hours.
- If your unit is often used in dusty or harsh environments, the air cleaner should be cleaned every 10 hours. If necessary, the air cleaner should be changed every 25 hours.
- If the maintenance cycle time has elapsed, perform necessary maintenance as soon as possible.

⚠ WARNING: ALWAYS SHUT DOWN THE ENGINE BEFORE PERFORMING ANY MAINTENANCE. IN ORDER TO PREVENT THE ENGINE FROM STARTING, REMOVE THE SPARK PLUG CAP FROM THE SPARK PLUG.

The spark plug is an important part of the generator, which must be inspected regularly.

1. There is a spark plug on each of the left and right sides of the generator. Pull out the spark plug cap.



2. Use a ratchet and spark plug socket (included with your generator) to unscrew and remove the spark plug.



3. Check for any discolouration and remove any buildup of carbon deposits. Check the spark plug for pale or moderate brown coloration on the ceramic cores around the center electrode.



4. Check the model of spark plug and clearance.

Spark plug gap: 0.7-0.8mm

BRAND	MODEL
NGK	BPR6ES
TORCH	F6RTC



5. Install the spark plugs in reverse order of removal.

Spark plug torque: 22.5±2.5Nm (199±22 inch-lb)



TIP: IF YOU DO NOT HAVE A TORQUE WRENCH WHEN INSTALLING THE SPARK PLUG, YOU CAN INSTALL IT USING 1/4 - 1/2 TURNS


CARBURETOR ADJUSTMENT

The carburetor is an important component of the engine. If the carburetor needs to be serviced, contact your service center to have a professional ensure that necessary adjustments are done correctly.

OIL REPLACEMENT

⚠ WARNING: DO NOT DRAIN OIL IMMEDIATELY AFTER OPERATING YOUR UNIT. THE OIL WILL BE VERY HOT AND SHOULD BE LEFT TO COOL DOWN IN ORDER TO PREVENT INJURY OR BURNS.


1. Place the generator on a flat surface.

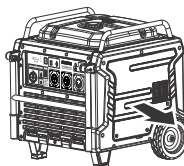

2. Loosen bolts and remove the left side cover. Remove the rubber sealing plug from the generator base plate.



3. Open the fixing clip, unscrew the drain pipe cover, and drain the oil.

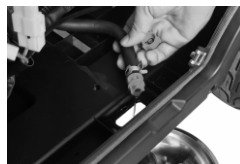

4. Tighten the cover of the oil drain pipe and place it back in place. After the oil is completely drained, tighten the cover of the oil drain pipe and place it back in its original position.



5. Loosen bolts and remove the right side cover. Unscrew oil fill cap.




6. Refill oil to the correct level and tighten the dipstick.

RECOMMENDED OIL	SAE-10W30
OIL GRADE	API STANDARD MODEL SJ OR HIGHER
VOLUME	REFER TO TECHNICAL PARAMETERS TABLE

Oil filters are used to remove impurities such as dust, metal particles, and carbon deposits from engine oil to protect the engine. Suggest replacing it every 250 hours.

REPLACE ENGINE OIL FILTER

1. Drain the engine oil according to the method of draining the engine oil.
2. Open the Left Side Cover.
3. Place a container under the oil filter to catch any spilled oil. Remove the oil filter.
4. Install a new oil filter.

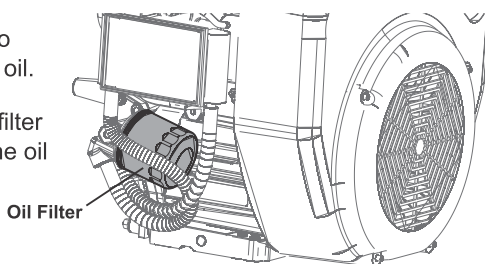

⚠ ATTENTION:

When installing a new oil filter, be sure to tighten it, otherwise it may cause oil leakage during machine operation. The new oil filter must be consistent with the old model.

FUEL FILTER CLEANING

1. Remove the fuel tank cap and fuel filter screen.
2. Clean the filter screen with gasoline.
3. Wipe the filter screen dry and place back into tank.
4. Reassemble the fuel tank cap.




AIR FILTER SERVICE




AIR FILTER CLEANING

The air filter can get dirty after prolonged use and needs to be cleaned or replaced regularly. If frequently operating in dusty environments, maintenance must be done more often.

1. Loosen bolts and remove the left side cover.

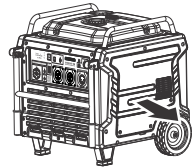

2. Loosen the three bolts on both sides and in the middle of the filter cover and remove the filter cover.

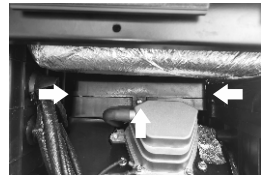

2. Remove the air filter element.



3. Use a soft bristled brush (brush along its folds) or compressed air to remove dust and dirt adhering to the surface of the paper filter element.

NOTE: During maintenance, the paper filter cannot be cleaned in water, otherwise the paper filter will fail.



4. Return the air filter element to its original position. Reinstall the air filter cover.

NOTE: Make sure that the surface of air filter element is in close contact with air cleaner, and there shall be no gap leaking air. Be sure not to start the engine before air cleaner is assembled, because it will generate excessive toxic gas and wear the cylinder.

5. Reassemble the outer cover on the unit.

If you are planning to store your generator for **longer than 3 months**, it is important to follow the necessary storage procedure to prevent damage to the machine.

1. Follow the shutdown procedure to shut down your generator.
2. Drain the fuel from the fuel tank.
3. Start the engine in order to burn off remaining fuel from the carburetor.

TIP: DO NOT CONNECT ANY ELECTRICAL EQUIPMENT TO THE GENERATOR DURING THIS PROCESS. THE ENGINE RUN TIME WILL DEPEND ON HOW MUCH LEFTOVER FUEL WAS IN THE TANK.

4. Open the right side generator cover and locate the clear plastic hose on the carburetor and place a container underneath to catch fuel.



5. Loosen the carburetor drain bolt until you begin to see fuel draining from the carburetor.



6. Allow the fuel to drain into the container until none remains. Tighten the drain bolt back into place.



7. Follow the oil change procedure.
8. Gently pull the recoil handle until you feel resistance. This allows the inlet and outlet valves to close.
9. Disconnect the battery cable.
10. Place your unit in a clean and dry area.

TRANSPORT TIPS

When transporting your unit, ensure there is no way for fuel to spill out of the generator.

- Do not overfill the fuel tank.
- Do not operate the generator while in transport.
- Avoid placing the unit in direct sunlight.

TROUBLESHOOTING



PROBLEM	POSSIBLE CAUSE	SOLUTION
ENGINE WILL NOT START	FUEL RELATED: - No fuel in tank or fuel valve closed. - Choke not in START position/cold engine - Gasoline with more than 10% ethanol was used. - Low quality or old gasoline. - Dirty fuel passageways. - Carburetor needle stuck. Fuel can be smelled in the air. - Too much fuel in chamber. - Clogged fuel filter.	FUEL RELATED: - Fill fuel tank with fresh 87+ octane gasoline and open the fuel valve. Do not use gasoline with more than 10% ethanol (E15,E20,E85 etc.) - Move choke to START position. - Clean out ethanol rich gasoline from fuel system. Replace components damaged by ethanol. Fill fuel tank with fresh 87+ octane gasoline and open the fuel valve. Do not use gasoline with more than 10% ethanol (E15,E20,E85 etc.) - Fill fuel tank with fresh 87+ octane gasoline and open the fuel valve. Do not use gasoline with more than 10% ethanol (E15,E20,E85 etc.) - Clean out passageways using fuel additive. Heavy deposits may require further cleaning. - Gentle tap side of carburetor flat chamber with screwdriver handle. - Turn choke to RUN position. Remove spark plug and pull the recoil handle several times to air out the chamber. Reinstall spark plug and set the choke to START. - Replace fuel filter.
	IGNITION (SPARK RELATED): - Power switch in OFF position. - Spark plug cap not connected securely. - Spark plug electrode wet or dirty. - Incorrect spark plug gap. - Spark plug cap broken. - Circuit breaker tripped. - Incorrect spark timing or faulty ignition system.	IGNITION (SPARK RELATED): - Turn power switch ON - Reconnect spark plug cap - Clean spark plug - Correct the spark plug gap. - Replace the spark plug cap. - Reset circuit breaker. Check wiring and start motor if breaker continues to trip. - Have qualified repair technician diagnose/ repair ignition system.
	COMPRESSION RELATED: - Cylinder not lubricated. Can happen after long storage periods. - Loose or broken spark plug. (hissing noise when trying to start.) - Loose cylinder head or damaged head gasket. (hissing noise when trying to start.) - Engine valves or or tappets misaligned or stuck.	COMPRESSION RELATED: - Pour tablespoon of oil into sparkplug hole. Crank engine a few times and try to start. - Tighten spark plug. If that does not work, replace spark plug. - Tighten head, if that doesn't work, replace the head gasket. - Have qualified repair technician adjust/ repair valves and tappets.
	ENGINE OIL RELATED: - Low engine oil - Unit on slope, triggering the low oil shutdown.	ENGINE OIL RELATED: - Fill engine oil to proper level. Check engine oil before EVERY use. - Operate unit on a level surface. Check engine oil level.
	SPARK ARRESTOR: Low engine oil	SPARK ARRESTOR: Clean and replace spark arrestor.



TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
ENGINE MISFIRES	1. Spark plug cap is loose. 2. Incorrect spark plug gap or damaged spark plug. 3. Defective spark plug cap. 4. Old or low quality gasoline. 5. Incorrect compression.	1. Check cap and wire connections 2. Re-gap or replace spark plug. 3. Replace spark plug cap. 4. Fill fuel tank with fresh 87+ octane gasoline and open the fuel valve. Do not use gasoline with more than 10% ethanol (E15,E20,E85 etc.) 5. Diagnose and repair compression. (refer to Engine will not start: COMPRESSION RELATED section.)
ENGINE STOPS SUDDENLY	1. Carbon monoxide level high. Red light on carbon monoxide sensor illuminates. 2. CO sensor alarm flashes yellow shortly after starting. 3. CO sensor alarm flashes yellow continually after longer period of operation. 4. Low oil shutdown. 5. Fuel tank empty or full of impure or low quality gasoline. 6. Defective fuel tank cap creating vacuum, preventing proper fuel flow. 7. Faulty magneto 8. Disconnected or improperly connected spark plug cap.	1. Leave area immediately and allow area to ventilate thoroughly. Only operate generator outside. 2. Carbon monoxide sensor malfunction. Sensor needs service. Do not use generator until fixed. 3. Make sure to operate generator within rated ambient temperature; maintain minimum 5ft' clearance on all sides. 4. Fill engine oil to proper level. Check engine oil before each use. 5. Fill fuel tank with fresh 87+ octane gasoline and open the fuel valve. Do not use gasoline with more than 10% ethanol (E15,E20,E85 etc.) 6. Test/replace fuel tank cap. 7. Have qualified technician service magneto. 8. Secure spark plug cap.
ENGINE STOPS WHEN UNDER HEAVY LOAD	1. Dirty air filter. 2. Engine running cold.	1. Clean air filter. 2. Allow engine to warm up before operating equipment.
ENGINE KNOCKS	1. Old or low quality gasoline. 2. Engine overloaded. 3. Incorrect spark timing, deposit buildup, worn engine, other mechanical issues.	1. Fill fuel tank with correct gasoline. 2. Do not exceed equipment's load rating. 3. Have a qualified technician diagnose and service the engine.
ENGINE BACKFIRES	1. Old or low quality gasoline. 2. Engine too cold. 3. Intake valve stuck or engine overheated. 4. Incorrect timing.	1. Fill fuel tank with correct gasoline. 2. Use cold weather fuel and oil additives to prevent backfiring. 3. Have a qualified technician diagnose and service the engine. 4. Check engine timing.
ATTACHED DEVICE DOESN'T HAVE POWER	1. Device not plugged in properly. 2. Circuit breaker tripped. 3. Product needs service.	1. Turn off and unplug the device, plug back in and turn back on. 2. Turn off and unplug device. Reset circuit breaker. Plug in device, turn it on. 3. Have product serviced.
ATTACHED DEVICE BEGINS TO OPERATE ABNORMALLY	1. Device not plugged in properly. 2. Circuit breaker tripped.	1. Immediately unplug device. Have device serviced by a qualified technician. 2. Lower the number of items plugged into the generator to stay within rated capacity.

TECHNICAL PARAMETERS

ITEM	Gi130E
Rated Power (Kw)	12.0
Max Power (Kw)	13.0
Engine Model	2V82F
Valve Clearance	Input valve: 0.10~0.15 mm, Output valve: 0.15~0.20 mm
Stroke X Bore (Mm)	82×72
Engine Type	4-stroke
Displacement (Cc)	760
Gas Distribution Mode	OHV
Cooling Mode	Air cooled
Rated Speed (Rpm)	3600
Starting Method	Recoil Start / Electric Start
Fuel Tank Volume (L)	40
Fuel Type And Grade	Unleaded 87+ Octane
Oil Capacity (ml)	1600
Oil Type	SAE 10W-30
Db @ 7m (25% Load)	63
Rated Voltage (V)	240
Rated Frequency (Hz)	50
Rated Power Factor	1
Phase Number	Single Phase
Run Time @25% (Hour)	About 14
Fuel Consumption Rate (25%) (L/h)	2.8
Fuel Consumption Rate (100%) (L/h)	7.5
THD	≤3%
Overall Dimension (mm)	840x795x845
Net Weight (Kg)	140



WARRANTY STATEMENT

DURATION: This Generator will be under warranty for 3 Years from date of purchase, or 500 Hours of use (Whichever comes first.)

WHO GIVES THIS WARRANTY (WARRANTOR):

BAR Group Pty Ltd.

WHO RECEIVES THIS WARRANTY(PURCHASER):

The original purchaser (other than for purposes of resale) of the BE Power Equipment generator.

WHAT PRODUCTS ARE COVERED BY THIS WARRANTY:

Any portable generator supplied or manufactured by Warrantor.

WHAT IS COVERED UNDER THIS WARRANTY:

Substantial defects on material and workmanship which occur within the duration of the warranty period.

WHAT IS NOT COVERED UNDER THIS WARRANTY:

- Transportation changes for sending the product to Warrantor or its authorized service representative for warranty service, or for shipping repaired or replacement products back to the customer; these charges must be borne by the customer.
- Damages caused by abuse, accident, shipping, misuse, overloading, modification, and the effects of corrosion, erosion and normal wear and tear.
- Warranty is voided if the customer fails to install, maintain and operate the product in accordance with the instructions and recommendations set forth in the owner's manual(s), or if the product is used as rental equipment.
- Pre-delivery service, i.e. assembly, oil or lubricants, and adjustment.
- Items or service that are normally required to maintain the product, i.e. lubricants and filters.
- Warrantor will not pay for repairs or adjustments to the product, or for any costs or labour, performed without Warrantor's prior authorization.

RESPONSIBILITIES OF PURCHASER UNDER THIS WARRANTY:

- The purchaser must provide dated proof of purchase and must notify Warrantor within the warranty period.
- Deliver or ship the serviced generator or component to the nearest Warrantor's authorized service representative. Freight costs, if any, must be borne by the purchaser.

HAVE QUESTIONS?

CALL **AUS: 02 4577 2144**
NZ: 0800 237 769



Dealer Name: _____

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Distributed in Australia by:
B.A.R. GROUP PTY LTD

15 Hudson Place,
Mulgrave, NSW, Australia 2756
Phone: 02 4577 2144
URL: www.bargroup.com.au

Distributed in New Zealand by:
BE Pressure Supply LTD

541D Te Rapa Road, Te Rapa,
Hamilton 3200, New Zealand
Phone: 0800 237 769
URL: www.bepressure.co.nz