
BE POWER® EQUIPMENT

PEDESTAL & WALL FAN COMBO

USER MANUAL

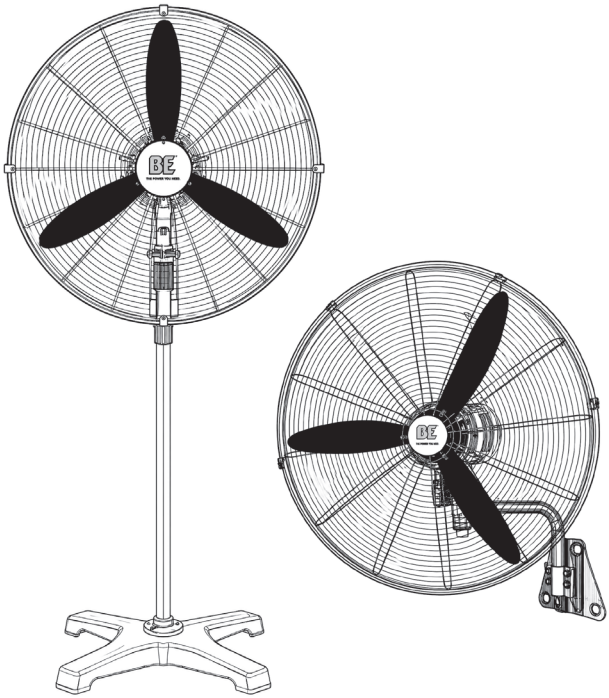

MODEL NO. PIN FSB75 COMBO

V1.0 2026

CONTENTS

SAFETY INSTRUCTIONS 3

FAN DIMENSIONS 4

PEDESTAL FAN ASSEMBLY 5

WALL FAN ASSEMBLY 6

OPERATION 7

ELECTRICAL DIAGRAM 8

EXPLOSION VIEW & PARTS BREAKDOWN 9

WARRANTY 11

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

This product is intended for indoor use only.

Always operate the product using a power supply with the same voltage, frequency and rating as specified on the product rating plate.

To reduce the risk of electric shock, do not use this fan with any solid-state speed control device.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by those lacking experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.
Never insert fingers or any foreign objects through the front or rear guard or into the fan blades. Close supervision is required when the appliance is used by or near children, elderly persons, or individuals with reduced physical capabilities.

Do not operate the product if the power cord or plug is damaged, if it has malfunctioned, been dropped, or appears damaged in any way. Return the complete product to the place of purchase or an authorised service centre for inspection, repair or replacement.

To reduce the risk of electric shock, do not immerse the appliance or power cord in water or expose it to rain, moisture or any other liquid. Do not use this product near water, including sinks, bathtubs, basins, swimming pools or other locations where it may be exposed to splashing or immersion.

Switch the appliance off and disconnect it from the power outlet when not in use, before assembling or disassembling parts, and before cleaning. Ensure the fan is fully assembled before operating.

Keep hands, hair, clothing and other objects away from moving parts. Never insert objects through the guard while the fan is operating.


Do not cover the fan guard or operate the appliance close to curtains, drapes or other materials that may obstruct airflow. Always disconnect the fan from the power supply before moving it.

Only use attachments and accessories recommended by the manufacturer. The use of non-approved accessories may result in injury, electric shock or property damage.
Do not attempt to modify or repair the appliance yourself. Repairs must only be carried out by a qualified service technician.

Always place the appliance on a stable, level and dry surface during operation.
The manufacturer accepts no responsibility for damage or injury resulting from improper use, misuse or failure to follow these instructions.


Ensure adequate ventilation is maintained when operating the appliance. Precautions must be taken to prevent the backflow of gases into the room from open-flue gas appliances or other fuel-burning appliances.

FAN DIMENSIONS

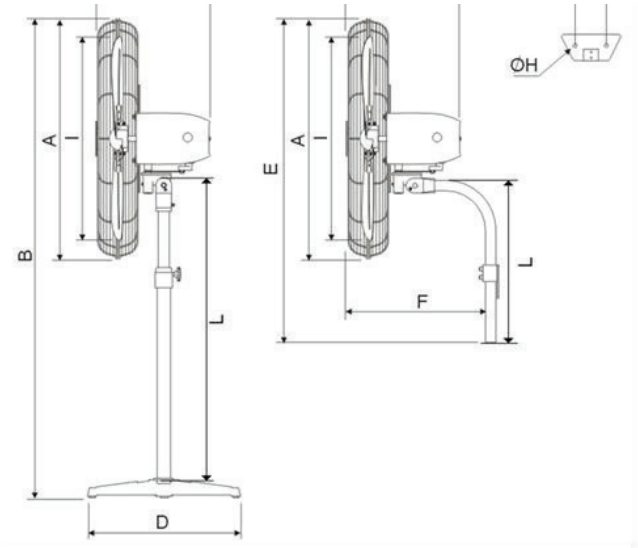


Item / Model	A	B		C	E	F	G	H	L
		min	max						
Pedestal	810	1500	1900	305					1250
Wall	810			305	850	500	125	12.5	400

PEDESTAL FAN ASSEMBLY

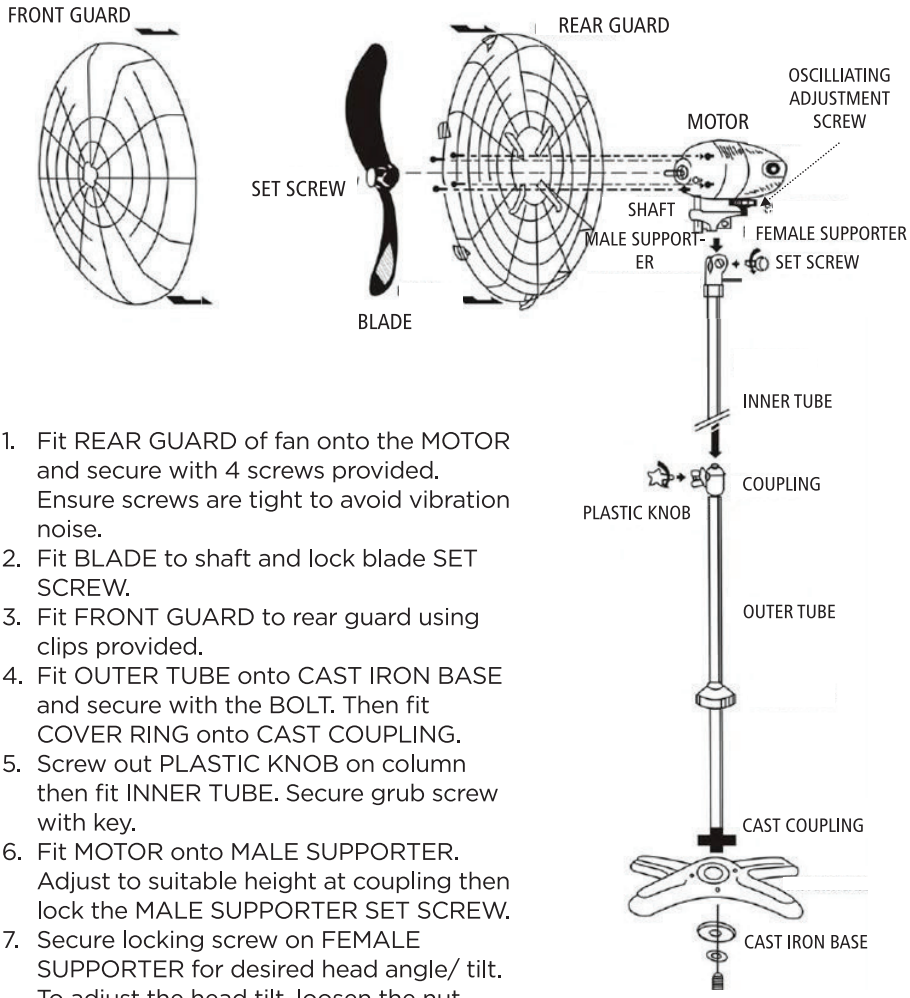

1. Fit REAR GUARD of fan onto the MOTOR and secure with 4 screws provided. Ensure screws are tight to avoid vibration noise.
2. Fit BLADE to shaft and lock blade SET SCREW.
3. Fit FRONT GUARD to rear guard using clips provided.
4. Fit OUTER TUBE onto CAST IRON BASE and secure with the BOLT. Then fit COVER RING onto CAST COUPLING.
5. Screw out PLASTIC KNOB on column then fit INNER TUBE. Secure grub screw with key.
6. Fit MOTOR onto MALE SUPPORTER. Adjust to suitable height at coupling then lock the MALE SUPPORTER SET SCREW.
7. Secure locking screw on FEMALE SUPPORTER for desired head angle/ tilt. To adjust the head tilt, loosen the nut above the female support, then re-secure the nut after adjustment.

WALL FAN ASSEMBLY

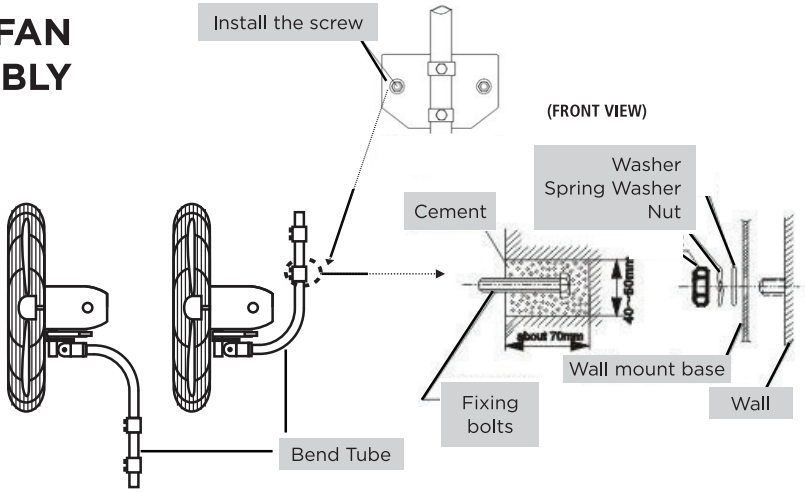


1. Complete points 1-3 on page 4.
2. Attach the wall mount base to the wall by drilling two holes with a M 10*80 drill bit. Secure with the two M12 screws provided.

   NOTE: Installation height should be a minimum of 2.5 metres from the ground.

   IMPORTANT: Check wall is suitable for mounting and supporting the wall fan.

3. Insert the BEND TUBE through the two "U" shape slots provided in the wall mount base & lock them into position using the two screws provided.

   NOTE: The Bend tube can be positioned either upwards or downwards. You must orient female support upward by removing the screw, repositioning & resecuring. Never attach the fan so it is hanging below the female supporter.

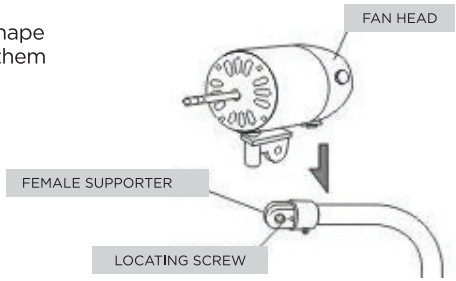

4. Insert the motor into the female support and secure with the screw.
5. Secure locking screw on FEMALE SUPPORTER for desired head angle/ tilt. To adjust the head tilt, loosen the nut above the female support, then re-secure the nut after adjustment.

WARNING! Make sure all parts are assembled correctly and connections are tight.
WARNING! If supply cable to too tight the oscillating motion can cause damage ensure sufficient section of cable to avoid damage.

ENVIRONMENT OF USE

1. The max relative humidity is 90% (when in 25°C);
2. Below 1000 metres altitude.

OPERATION

1. Make sure the Fans voltage is in accordance with local voltage before use.
2. The fan is recommended for use in ordinary indoor situations, but not at high humidity.
3. To turn on select the desired speed setting
   O - Off
   1 - Slow
   2 - Medium
   3- Fast
4. For fixed air flow ensure the swing arm is not connected to the fan motor
5. For oscillating air flow ensure the swing arm is connected to the fan motor by rotating the oscillating adjustment screw in an anti-clockwise direction.
6. Unplug the fan when not in use.

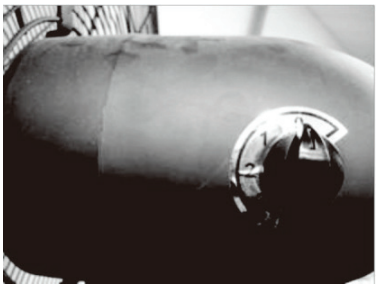


FIG 1 – The fan switch on the OFF position

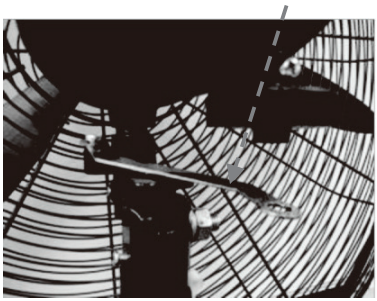


FIG 2 – The fan head in the FIXED air flow position

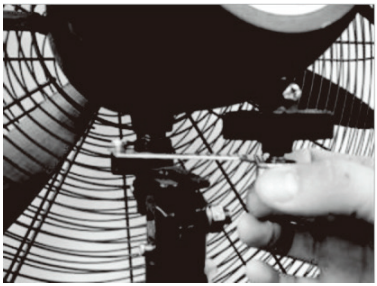


FIG 3 – For an OSCILLATING fan head, turn the OSCILLATING ADJUSTMENT screw anticlockwise to attach SWING ARM to fan head



FIG 4 – The fan head in the OSCILLATION position. Oscillation is 0-90°.

OPERATION

1. To ensure prolonged safe use ensure you have this unit inspected, cleaned & moving parts lubricated by a qualified person after every 1000 hours of use.


2. Regularly inspect the cord & plug & do not use if damaged. A licensed electrician is required to repair or replace the cord & plug.

3. Any other repairs or maintenance must be performed by a qualified person.


SPECIFICATIONS

Model	Description	Size (mm)	Volt (V~)	Freq (Hz)	Watts (W	Air Flow (m^3/min)
FS75	Pedestal Fan	750	220-240	50	280	290
FB75	Wall Fan	750	220-240	50	280	290
FSB75	Pedestal & Wall Fan	750	220-240	50	280	290
The data above is for reference only and may change without notice						

ELECTRICAL DIAGRAM

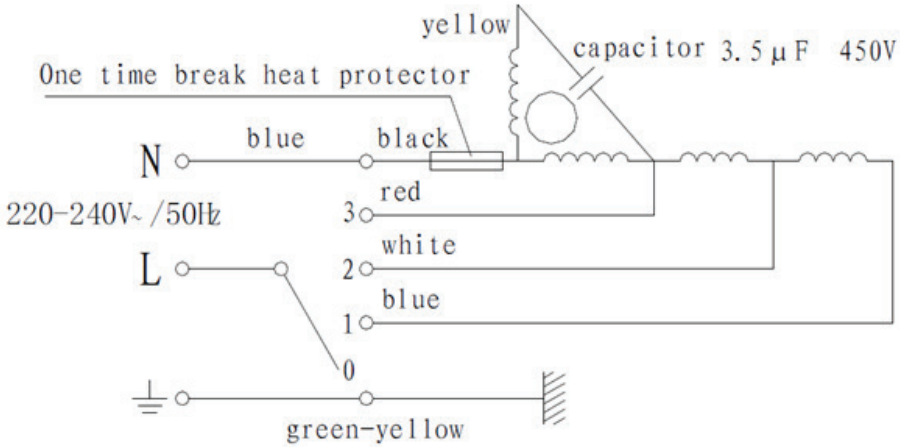


EXPLOSION VIEW & PARTS BREAKDOWN

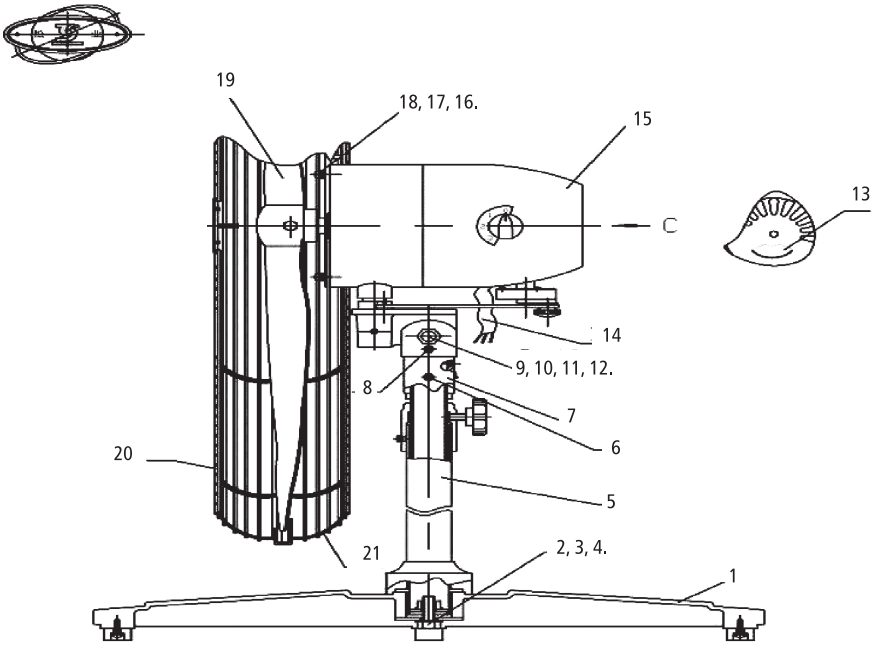

Serial No.	Item No.	Des.	QTY	Spec./Material	Remark
1	FS-75-050-000-000	Cross base	1	600/HT100	Spray coating
2	FS-75-040-030-000	Washer	1	D60 d12.5 §3	Plate color zinc
3	GB593-85	Spring washer	1	ϕ12	Plate color zinc
4	GB5780-86	Hex bolt	1	M12X40	Spray coating
5	FS-75-040-000-000	Supporting tube	1		Plate color zinc
6	GB818-85	Cross screw	1	M6X12	Spray coating
7	FS.FB-75-040-040-000	Under connector	1	HT-100	
8	GB818-85	Cross screw	1	M6X12	Plate color zinc
9	GB95-85	Washer	1	ϕ12	Plate color zinc
10	GB593-85	Spring washer	1	ϕ12	Plate color zinc
11	GB52-76	Hex nut	1	M12	Plate color zinc
12	GB30-76	Hex bolt	1	ϕ12X40	Plate color zinc
13	FS.FB-75-070-020-000	Rating label	1	Label	Plate color zinc
14		Power outlet	1	RVV 2X0.75+0.75M^2	Plate color zinc
15	FS.FB-75-011-000-010	Motor assembled indication	1		Plate color zinc
16	FS.FB-75-011-070-000	Fit washer	4	D15 d6.5 h1.5	2M Cord
17	GB593-85	Spring washer	4	ϕ6	Plate color zinc
18	GB818-85	Cross screw	4	M6X16	Plate color zinc
19	FS.FB-75-030-000-000	Fan blade	1	Aluminum	Plate color zinc
20	FS.FB-75-020-020-000	Front net	1		Spray coating
21	FS.FB-75-020-010-000	Back net	1		Spray coating
22	FS.FB-75-070-040-000	Net label	1	Aluminum	Spray coating

EXPLOSION VIEW & PARTS BREAKDOWN

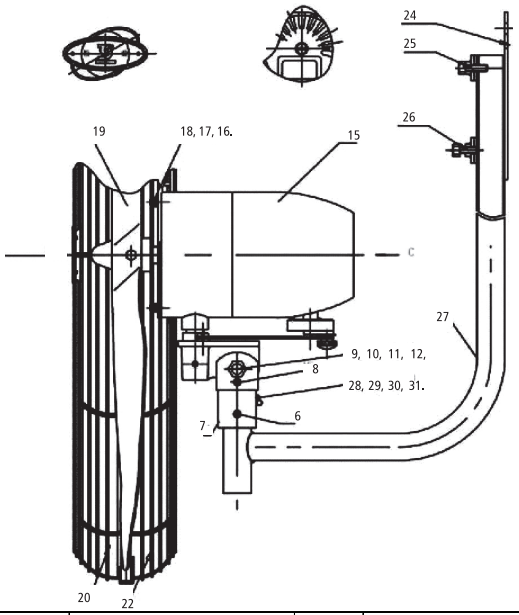

Serial No.	Item No.	Des.	QTY	Spec./Material	Remark
6	GB818-85	Cross screw	1	M6X12	Plate color zinc
7	FB.FB-65-040-040-000	Under connector	1	HT-100	Spray coating
8	GB818-85	Cross screw	1	M6X20	Plate color zinc
9	GB95-85	Washer	1	ϕ12	Plate color zinc
10	GB593-85	Spring washer	1	ϕ12	Plate color zinc
11	GB52-76	Hex nut	1	M12X40	Plate color zinc
12	GB30-76	Hex bolt	1	M12X40	Plate color zinc
15	FB.FB-65-011-000-010	Motor assembled indication	1		2M Cord
16	FS.FB-65-011-070-000	Fit washer	4	D15 d6.5 h1.5	Plate color zinc
17	GB593-85	Spring washer	4	ϕ6	Plate color zinc
18	GB818-85	Cross screw	4	M6X16	Plate color zinc
19	FS.FB-65-030-000-000	Fan blade	1		Spray coating
20	FS.FB-65-020-020-000	Front net	1		Spray coating
21	FS.FB-65-020-010-000	Back net	1		Spray coating
23	FS.FB-65-070-020-000	Rating label	1	Label	
24	FB-65-061-000-000	Hanger wall combination	1		Spray coating
25	GB30-76	Hex bolt	1	M8X25	Plate color zinc
26	GB30-76	Hex bolt	1	M8X20	Plate color zinc
27	FB-65-060-030-000	Hanger wall and elbow combination	1	§=1.2Xϕ32/A3 High frequency tube	Spray coating
28	KDDT-360	Cable clamp	1	ϕ6/NYLON1010	
29	GB95-85	Washer	1	ϕ4	Plate color zinc
30	GB593-85	Spring washer	1	ϕ4	Plate color zinc
31	GB70-76	Semicircular screw	1	M4X8	Plate color zinc

WARRANTY

We warrant that this product will be free from defects in materials or workmanship for a period of 12 months from the date of purchase. The benefits conferred by this warranty are in addition to all rights and remedies which you may be entitled to under the Australian Consumer Law, and any Other statutory nights you may have under other applicable laws. This Warranty does not exclude restrict or modify any such rights or remedies

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to the store where you purchased the product.

This Warranty is provided in addition to other rights and remedies you have under law. Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISTRIBUTED IN AUSTRALIA BY



B.A.R Group P/L
15 Hudson Place,
Mulgrave, NSW, Australia 2756
Phone: 02 4577 2144
www.bargroup.au

DISTRIBUTED IN NEW ZEALAND BY

BE POWER® EQUIPMENT

BE Pressure Supply
541D Te Rapa Road, Te Rapa,
Hamilton 3200, New Zealand
Phone: 07 849 0000
www.bepressure.co.nz

Errors and omissions excepted.
Specifications and performance may change.